AirLinkWiFi.Net

www.airlinkwifi.com

Smurf A1 P2P IP Camera User Manual

P2P IP Camera

H.264

1.0 MP

WIFI + SD Slot

PC Set Up:

1 Install the IPCSearch software provided with your camera (The software will create a shortcut on your desktop)

2 Connect your camera to your access point (AP) and power supply

3 After connecting your camera to the access point and power source. Connect your computer to your local wireless internet access and run the IPCSearch

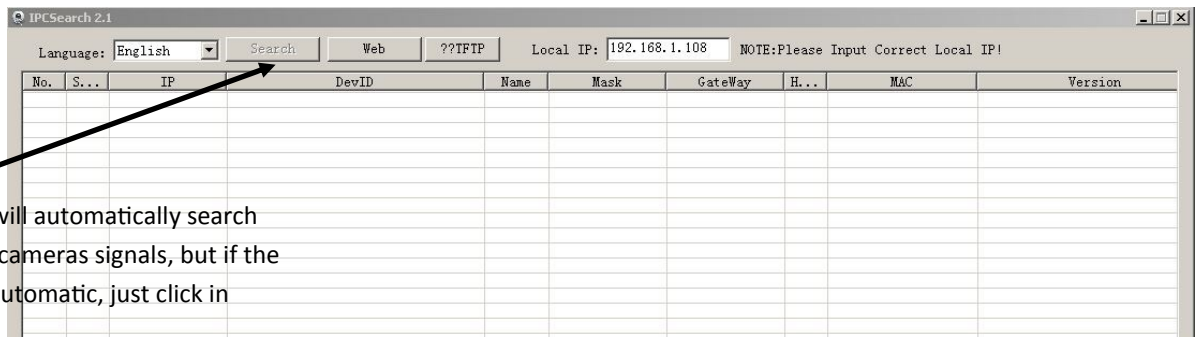

The program will automatically search for existing IP cameras signals, but if the search is not automatic, just click in Search

4

After scanning for all available IP cameras, select the desired one and double click on it (This will open an Internet Explorer Window)



Internet Explorer Window →

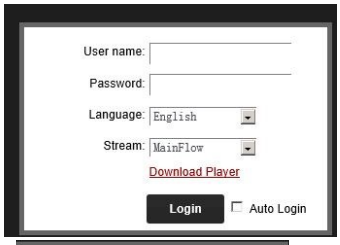

5

For firs time users of IP-CSearch: Download the IPCSearch player and install it in your PC

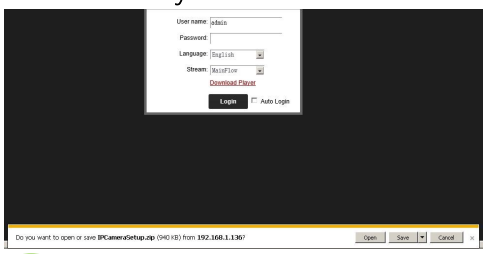

6

After installing the IP-CSearch player login using the predetermined **user name: admin** and **password: admin** (Which can be edited after you access the PCSearch platform)

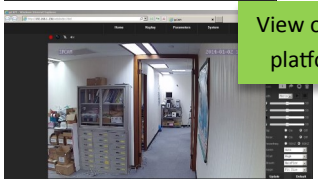

View of the platform

7 WIFI Settings

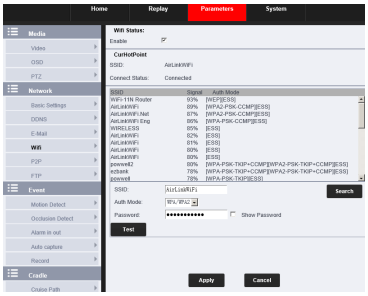

1) Click "Parameters" then under network click "WIFI" to enter the settings
2) Wifi Status: Tick the blank to enable the Wifi.
3) Search: Click it, the wifi around the camera will appear
4) Select the desired WIFI and insert the password
5) Apply the changes

8 EMAIL settings

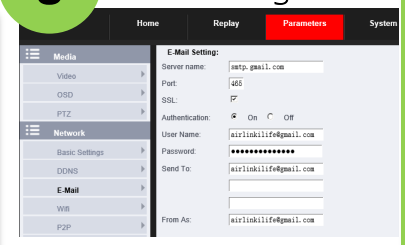

1) Click "Parameters" then under network click "E-mail" to enter the settings
2) Server name and Port was set by default.
3) Send To: Insert the E-mail where you want to receive the notifications for alarms

9 Motion Detection

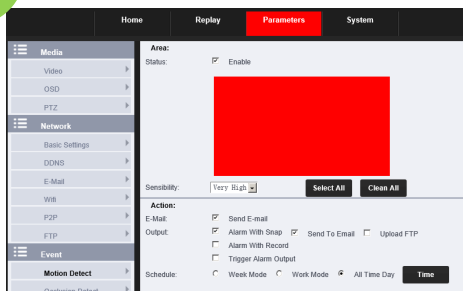

Week mode

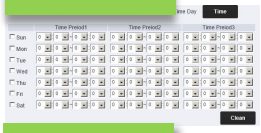

Work mode

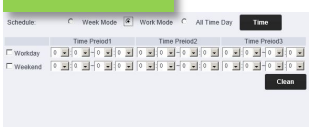

1) Click **Parameters** and under **Event** select **Motion Detection**
2) Click in Enable
3) Select the degree of **sensibility** of the motion detection
4) Choose the way you receive the alarms (email, FTP, snap)
5) In **Schedule** you can select the mode including week mode, work mode and all time day
6) Click the botton **"Time"** then select the time period that motion detection works

10 SD Card Settings

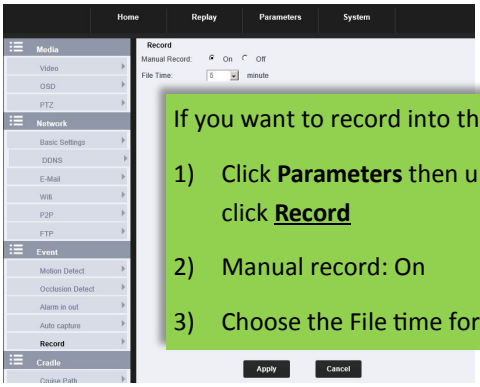

If you want to record into the SD card.

1) Click **Parameters** then under **Event** click **Record**
2) Manual record: On
3) Choose the File time for the record

After you finish all the PC settings you can UNPLUG your camera from the access point and install it in your desired location

AirLinkWiFi.Net

www.airlinkwifi.com

Hardware Installation

Location and environment precautions

- The environment temperature should be between -54˚ to 55˚C
- Do not install it near any strong electromagnetic interference source

1 Connect camera to power adaptor

2 Connect power adaptor to power

Mobile Set Up:

1 Download the app "P2PCamLive" and install it in your smartphone

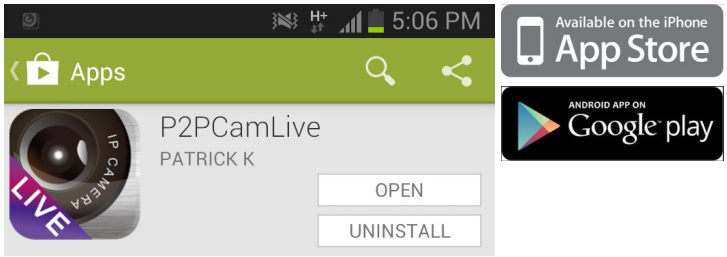

2 Add Camera

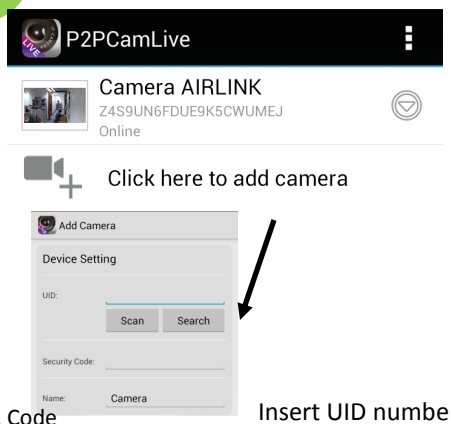

You can add cameras by two ways

1) Scan the QR Code from the camera with the app

2) Manually directly insert the UID No. written in the camera under the QR Code

You can find the UID also in the PCSearch software under Parameters—P2P)

3) Insert the Security Code (The predetermined security code is **admin**)

Scan QR Code

Insert UID number manually

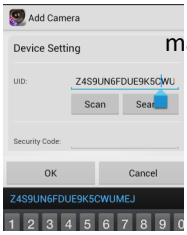

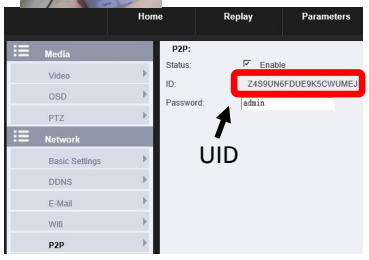

3 Voice and Screenshot features

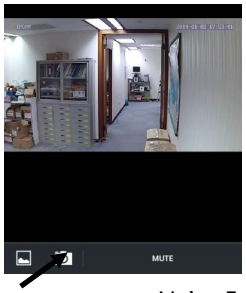

Snapshot feature

Voice Features

- Talk through the camera: If you connect speakers in your P2P IP Camera, you can talk through your phone and the people close to the camera can hear.
- Hear the environment: If you connect a microphone to the camera you can hear the environment in your phone.
- Taking snapshots: You can take individuals snapshots from your phone
- Viewing your snapshots: You can find the pictures in the gallery icon next to the camera icon.